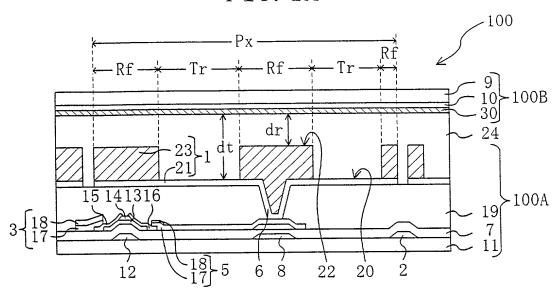
FIG. 1A



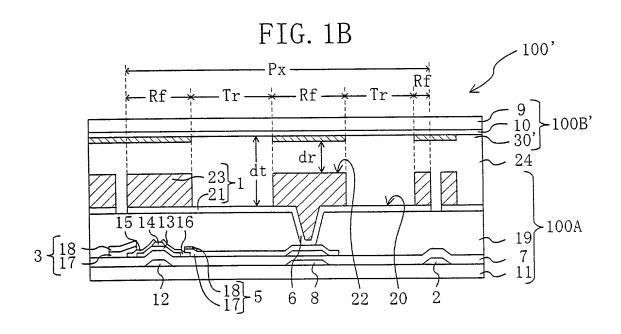
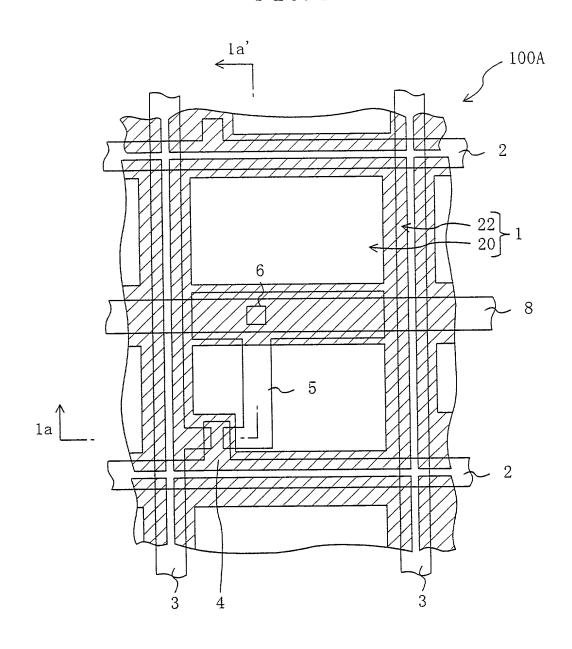
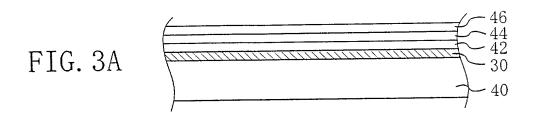
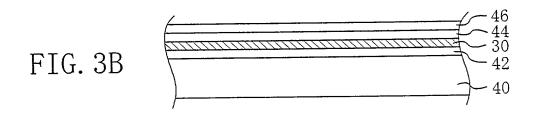


FIG. 2










FIG. 4A

Px

200

Rf

Px

9
10
30
100B

221
200A

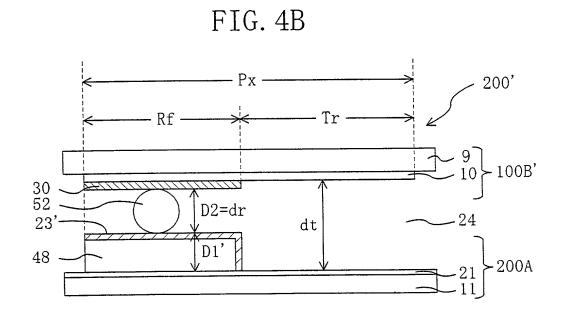


FIG. 5

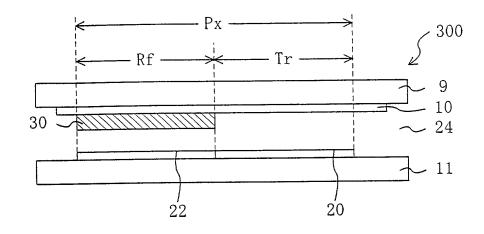


FIG. 6

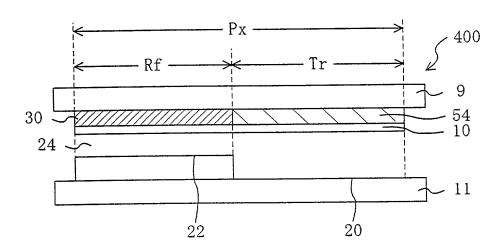


FIG. 7

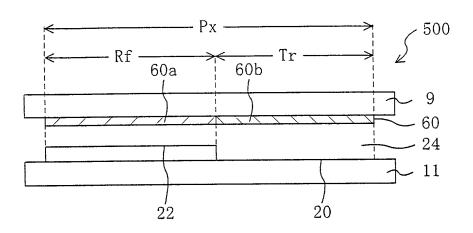


FIG. 8

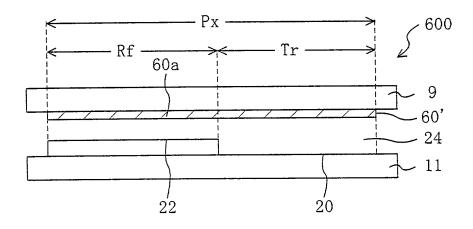


FIG. 9

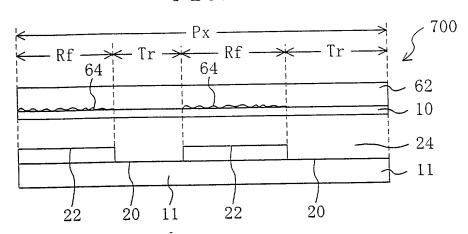


FIG. 10 \$800 – Px -Rf -- 70 - 10 30 -- 24 - 11 / 22 20

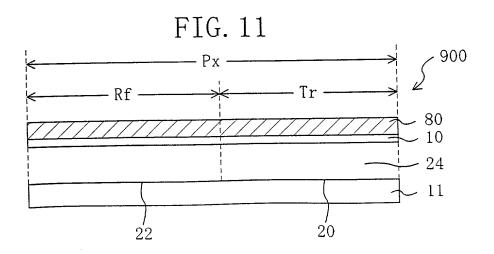


FIG. 12A

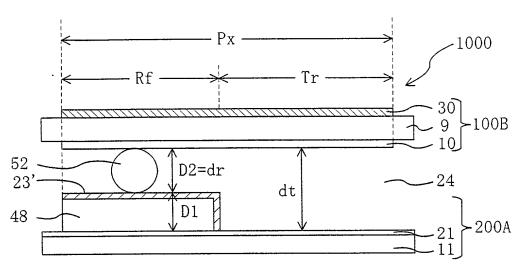


FIG. 12B

Px

1000'

Rf

Tr

9
100B'

52
23'

D2=dr

dt

24

200A

FIG. 13

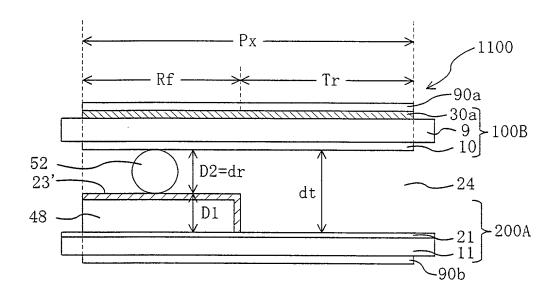


FIG. 14

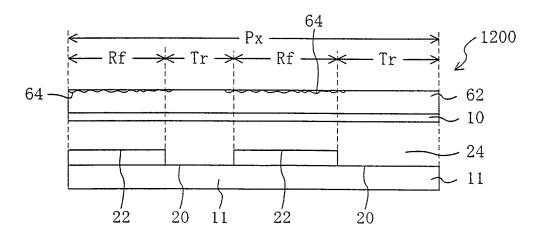


FIG. 15

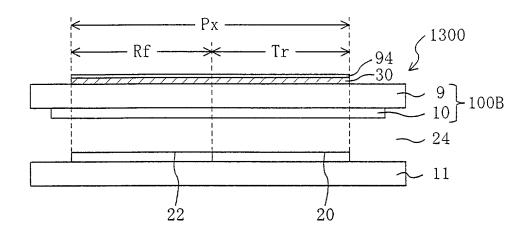


FIG. 17


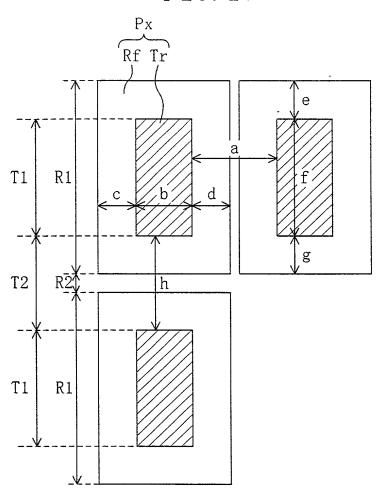


FIG. 19

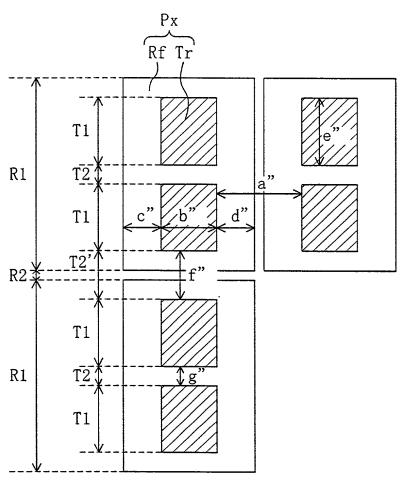

1